



Pos. Rep. Pos. Item	Code nr. No de code Kodenummer Code nr.	Benaming Désignation Benennung Description	Aant Nbre Zahl Qty
1		Bovenstel stoel, links / Siège G. / Linker Sitz Seat assy. LH	
-	106880	LHD	1
-	107040	RHD	1
2	330534	Onderstel stoel / Chassis de siège Sitz Untergestell / Seat base assy.	1
3	109144	Rugleuning / Dossier / Rücklehne / Seat back	1
4	170146	Dop / Bouchon / Stopfen / Plug	1
5	0-00-251998	Borgring / Circlip / Sicherungsring / Circlip	2
6	522677	Koppen / Axe à tête / Kopfbolzen / Clevis pin	2
7	109141	Zitkussen / Coussin / Sitzkissen / Seat	1
8	106883	Verstelknop / Bouton cranté / Randelknopf / Milled knob	1
11		Bovenraam / Cadre / Rahmen / Seat fram	
-	106881	LHD	1
-	107065	RHD	1
12	0-00-251275	Moer / Erou / Mutter / Nut	2
13	254794	Onderstel stoel / Chassis de siège Sitz Untergestell / Seat base assy.	1
14	330548	Hoekprofiel rechts / Profilé de fixation Befestigungsprofil / Fixing profile	1
15	330547	Hoekprofiel links / Profilé de fixation Befestigungsprofil / Fixing profile	1
16	532283	Torsieveer / Ressort de torsion / Torsionfeder / Torsion spring	1
17	225793	Grendel / Arrêtoir / Riegel-Vorrichtung / Locking device	1
18	0-00-251853	Splitpen / Goupille / Splint / Split pin	1
19	0-00-251791	Koppen / Axe à tête / Kopfbolzen / Clevis pin	1
20	330587	Achtersteun / Support / Stütze / Bracket	1
21	501587	Rubber veer / Tampon de caoutchouc Gummipuffer / Rubber buffer	2
22	330554	Bevestigingsplaat / Plaque de fixation Befestigungsplatte / Fixing plate	1
23	0-00-251939	Veerring / Grower / Federring / Spring washer	2
24	330541	Drager stoel / Support / Träger / Bearer	1
25	330537	Zijplaat links / Plaque de support G. Trägerplatte Li / Support plate LH.	1
26	0-00-523872	Moer / Erou / Mutter / Nut	8
27	0-00-251930	Veerring / Grower / Federring / Spring washer	8
28	330553	Draadspil / Pivot / Gewindestift / Threaded spindle	1

Pos. Rep. Pos. Item	Code nr. No de code Kodenummer Code nr.	Benaming Désignation Benennung Description	Aant Nbre Zahl Qty
29	330538	Zijplaat, rechts / Plaque de support, Dr. Trägerplatte, Re / Support plate, RH	1
30	0-00-251940	Veerring / Grower / Federring / Spring washer	6
31	0-00-523871	Moer / Ecrou / Mutter / Nut	6
32	330545	Lagerbus / Buselure / Lagerbüchse / Bushing	8
33	330546	Lagerpen / Axe / Bolzen / Shaft	4
34	330549	Drukstuk / Pièce de pression / Drückstück / Pressure piece	1
35	0-00-311185	Bout / Boulon / Schraube / Bolt	2
36	330154	Steun / Support / Stütze / Bracket	1
37	330582	Voorsteun / Support / Stütze / Bracket	1
38	330552	Draadspil / Pivot / Gewindestift / Threaded spindle	1
39	0-00-251746	Spanstift / Goupille fendue / Spanstift / Spring pin	2
40	588050	Verstelknop / Boulon cranté / Rändelknopf / Milled knob	2
41	0-00-501584	Trekveer / Ressort de tension / Zugfeder / Tension spring	1
42	330581	Dop / Bouchon / Stopfen / Plug	2
43	0-00-318912	Schroef / Vis / Schraube / Screw	4
44	0-00-251903	Sluitring / Rondelle / Scheibe / Washer	4
45	0-00-251937	Veerring / Grower / Federring / Spring washer	4
46		Rugleuning / Dossier / Rücklehne / Seat back	
-	109165	LHD	1
-	109166	RHD	1
47		Zitkussen / Coussin / Sitzkissen / Seat	
-	109167	LHD	1
-	109168	RHD	1
48	228956	Beugel / Support / Träger / Bearer	1
49	228957	Beugel / Support / Träger / Bearer	1